

PRODUCT SPECIFICATION

Seat post clamp QR or Bolt-On versions

Available sizes:

Ø28.6 | Ø30 | Ø31.8 | Ø34.9 | Ø36.4 | Ø38.5 | Ø39.7

TOOLS REQUIRED

- 4mm Hex


PRELIMINARY CHECKS

Make sure you have the correct clamp size for your frame. Measure the diameter of the seat tube on your frame, **not the diameter of the seatpost!**

You can also generally find the dimension of the required seat post clamp on your bike manufacturer's website.


The frame tube size should be within $\pm 0.5\text{mm}$ compared to the nominal clamp size.

INSTALLATION

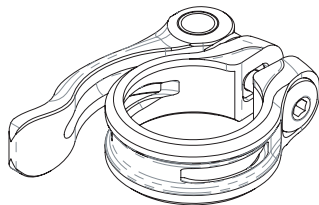

QR Type:


- Loosen the screw and open the lever.
- If you are replacing an existing clamp and using an internal routed dropper seatpost, remove the screw entirely so you can thread in the dropper cable guide then re-install the screw.
- Install the clamp making sure the lip is resting **on the top** of the frame seat tube.
- If present, align the (or one of the) slot of the frame with the slot of the clamp.
- Close the lever.
- Set the seatpost at the required height.
- Using a 4mm Hex tighten the screw up to the recommended tightening torque of **5N.m**
- If using a dropper seatpost make sure it is moving up and down freely. You may need to reduce tightening torque if not.

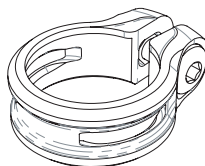

Bolt-On Type:

- Loosen the screw.
- If you are replacing an existing clamp and using an internal routed dropper seatpost, remove the screw entirely so you can thread in the dropper cable guide then re-install the screw.
- Install the clamp making sure the lip is resting **on the top** of the frame seat tube.
- If present, align the (or one of the) slot of the frame with the slot of the clamp.
- Set the seatpost at the required height.
- Using a 4mm Hex tighten the screw up to the recommended tightening torque of **6N.m**
- If using a dropper seatpost make sure it is moving up and down freely. You may need to reduce tightening torque if not.

INST051_EN: Instruction - Seat Clamps

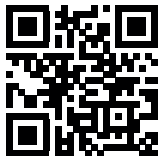

SPÉCIFICATIONS PRODUIT

Collier de selle à blocage rapide ou à vis

Tailles disponibles:

Ø28.6 | Ø30 | Ø31.8 | Ø34.9 | Ø36.4 | Ø38.5 | Ø39.7

OUTILLAGE NÉCESSAIRE


- Clef Allen ou embout de 4mm

CONTRÔLES PRÉLIMINAIRES

Assurez-vous que la taille du collier de selle est adaptée à votre cadre. Mesurez le diamètre du tube de selle de votre cadre, et non celui de la tige de selle !


Vous pouvez également trouver la dimension du collier de serrage de la tige de selle sur le site web du fabricant de votre vélo. La taille du tube du cadre doit se situer à +/-0,5 mm près par rapport à la taille du collier.

MONTAGE

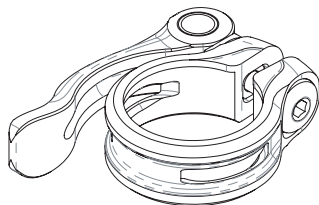

Type blocage rapide:

- Desserrez la vis et ouvrez le levier.
- Si vous remplacez un collier de selle existant et que vous utilisez une tige de selle télescopique à passage interne, retirez entièrement la vis afin de pouvoir faire glisser la gaine de commande, puis réinstallez la vis.
- Installez le collier en veillant à ce que la lèvre repose sur le haut du tube de selle du cadre.
- Le cas échéant, aligner la (ou l'une des) fente(s) du cadre avec la fente du collier.
- Fermez le levier de serrage.
- Réglez la tige de selle à la hauteur requise.
- À l'aide d'une clef Allen de 4 mm, serrez la vis au couple de serrage recommandé de **5N.m**
- Si vous utilisez une tige de selle télescopique, assurez-vous qu'elle monte et descend librement. Si ce n'est pas le cas, vous devrez peut-être ajuster le couple de serrage.

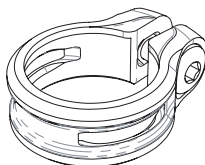

Type à vis:

- Desserrez la vis.
- Si vous remplacez un collier de selle existant et que vous utilisez une tige de selle télescopique à passage interne, retirez entièrement la vis afin de pouvoir faire glisser la gaine de commande, puis réinstallez la vis.
- Installez le collier en veillant à ce que la lèvre repose sur le haut du tube de selle du cadre.
- Le cas échéant, aligner la (ou l'une des) fente(s) du cadre avec la fente du collier.
- Réglez la tige de selle à la hauteur requise.
- À l'aide d'une clef Allen de 4 mm, serrez la vis au couple de serrage recommandé de **6N.m**
- Si vous utilisez une tige de selle télescopique, assurez-vous qu'elle monte et descend librement. Si ce n'est pas le cas, vous devrez peut-être ajuster le couple de serrage.

INST051_FR: Instruction - Seat Clamps

SEAT CLAMPS

hope